


1

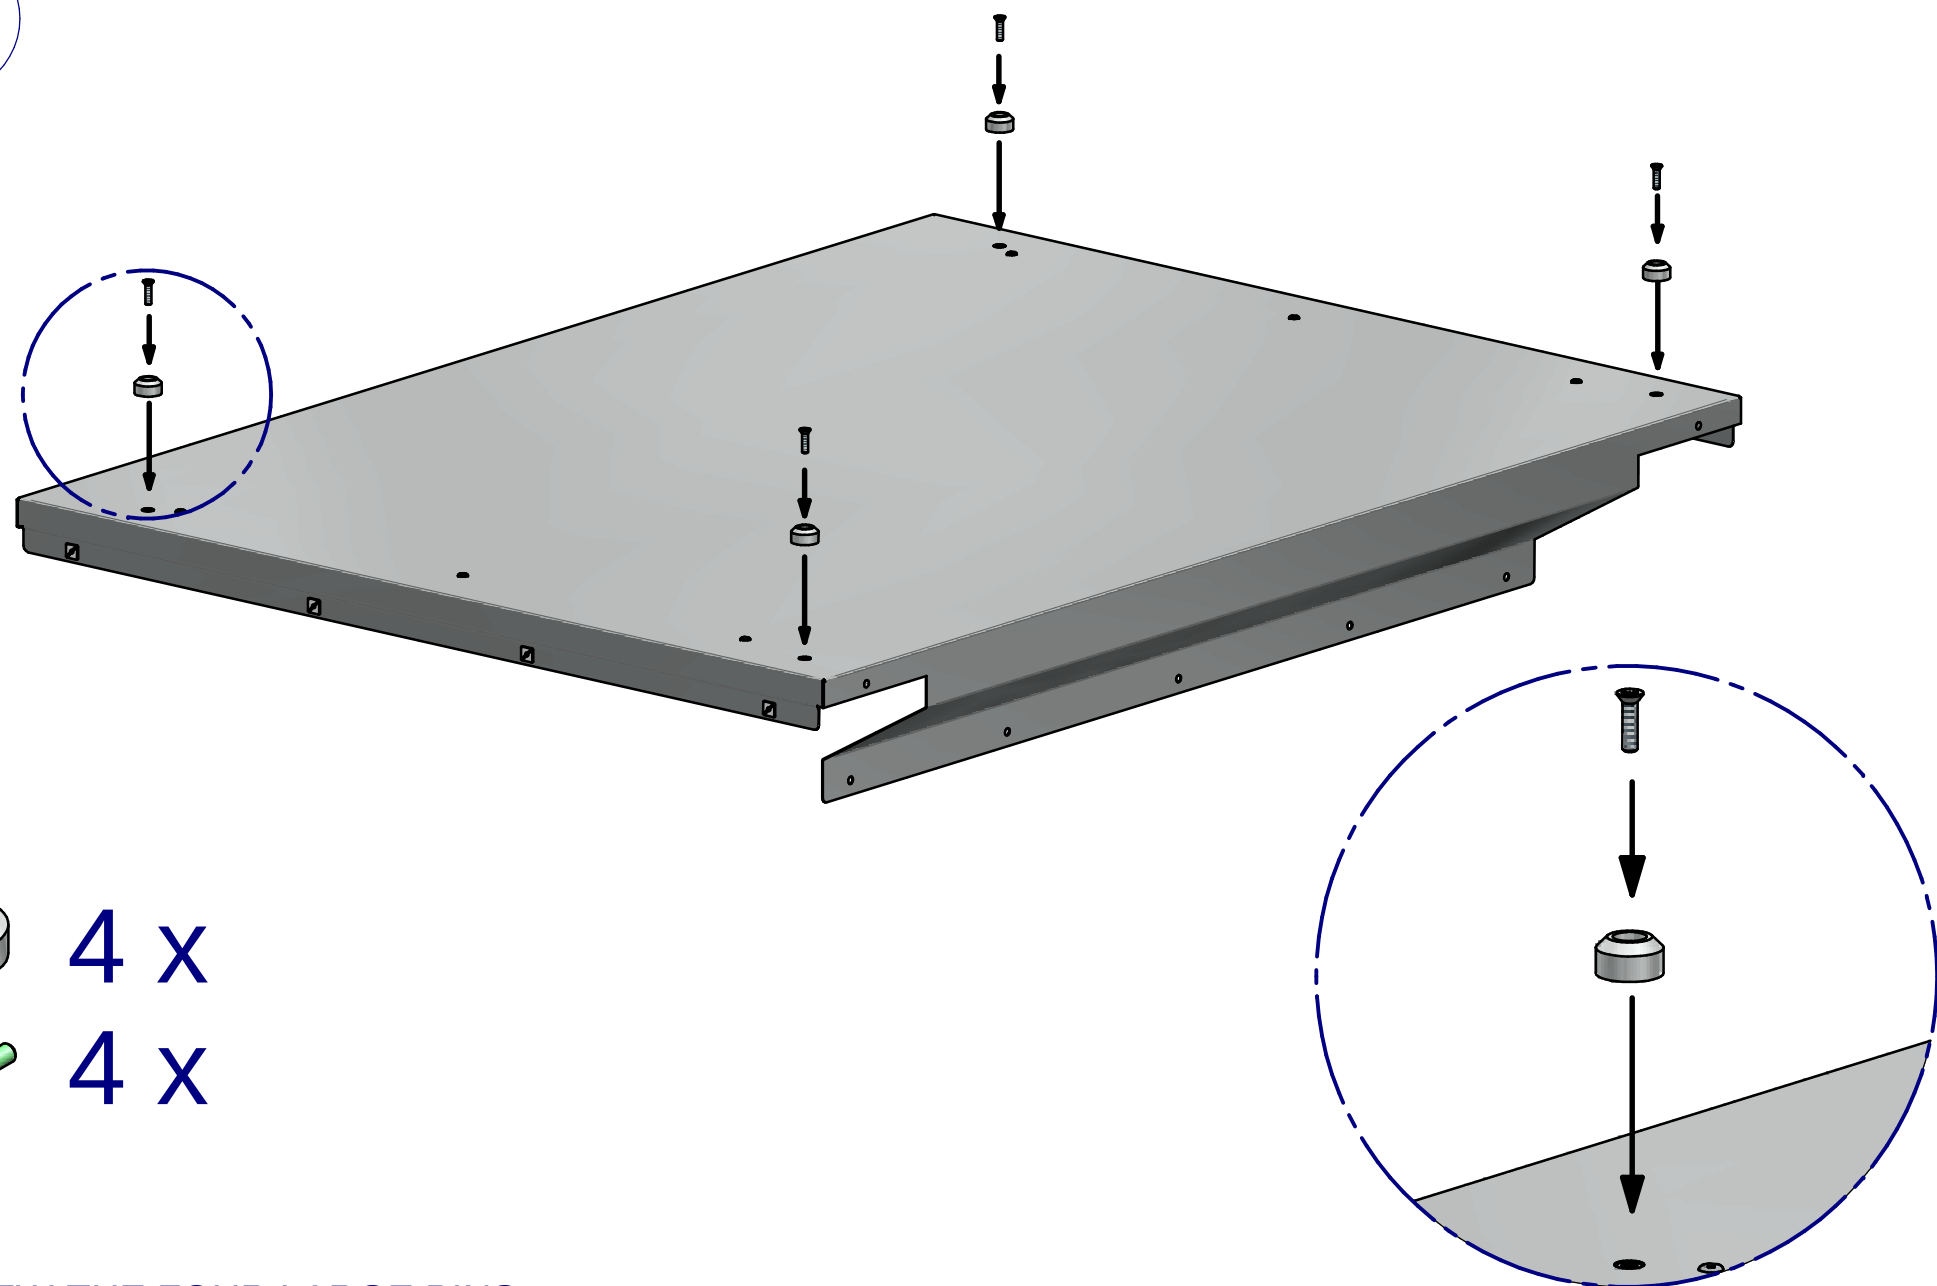


4 x

4 x

SCREW THE FOUR LARGE PINS
ON THE TOP SIDE

2

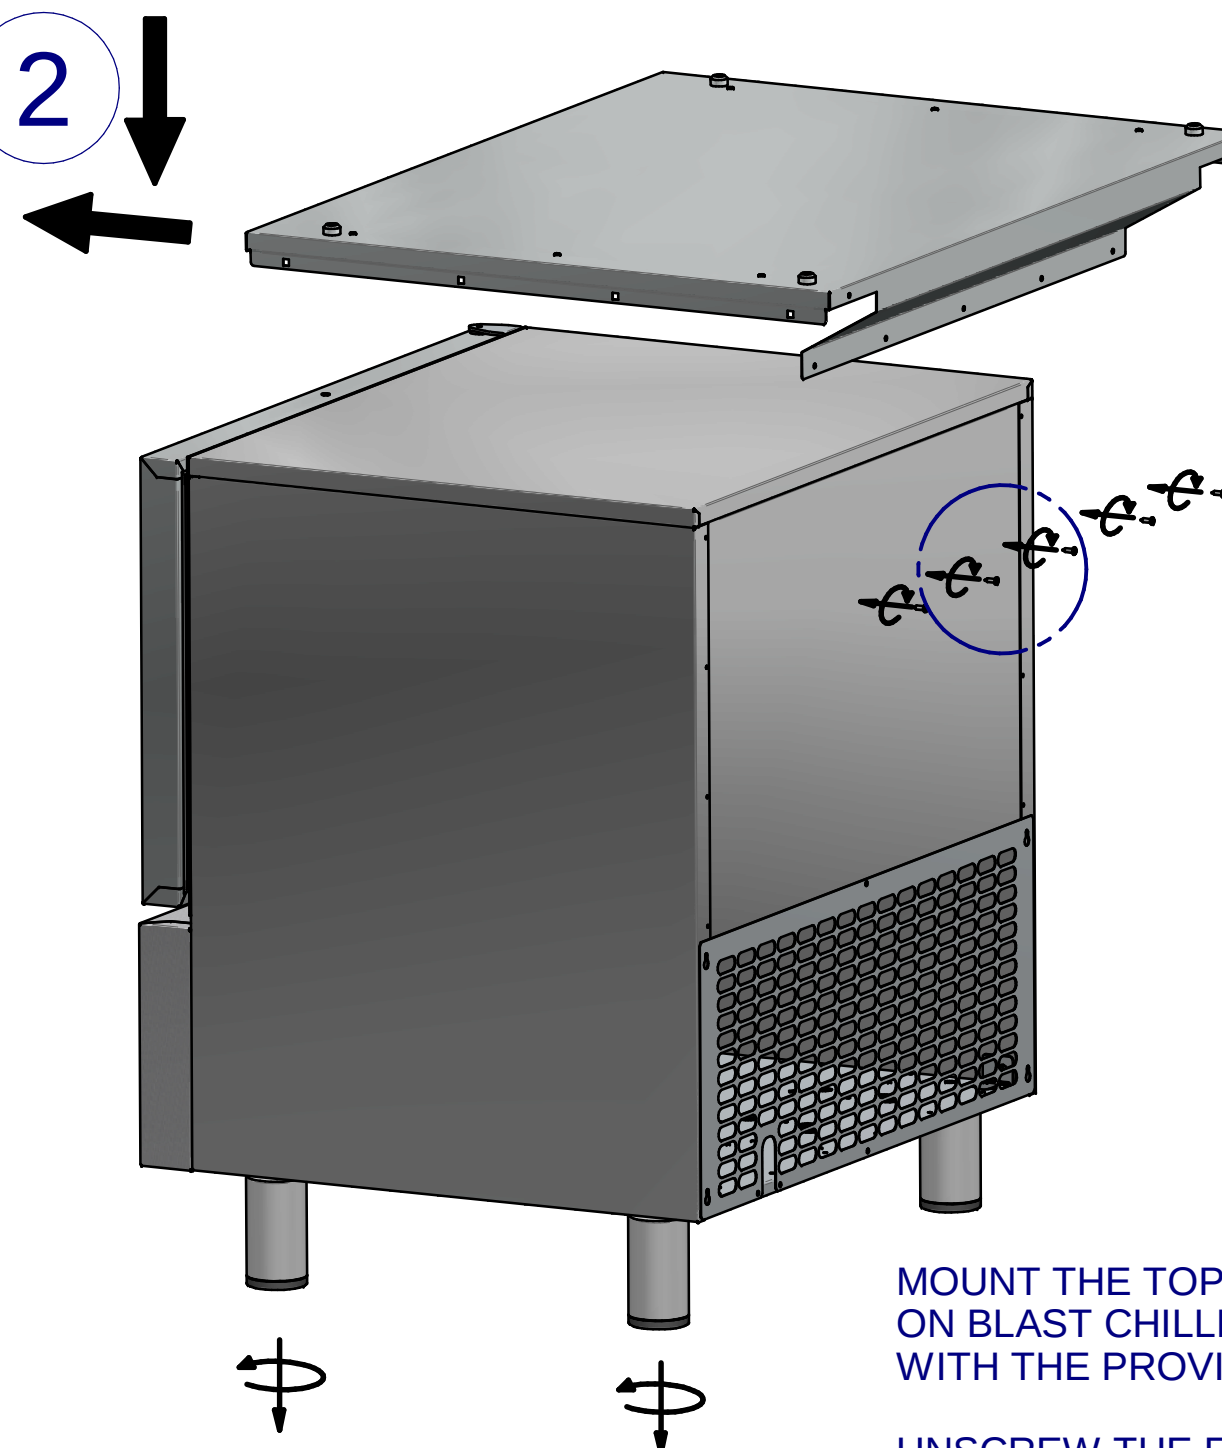


5 x

MOUNT THE TOP OF STACKING KIT
ON BLAST CHILLER AND FIX IT ON THE BACK SIDE
WITH THE PROVIDED SELF-DRILLING SCREWS (5pcs)

UNSCREW THE FEETS FOR ABOUT 5mm ON THE RIGHT SIDE

3a

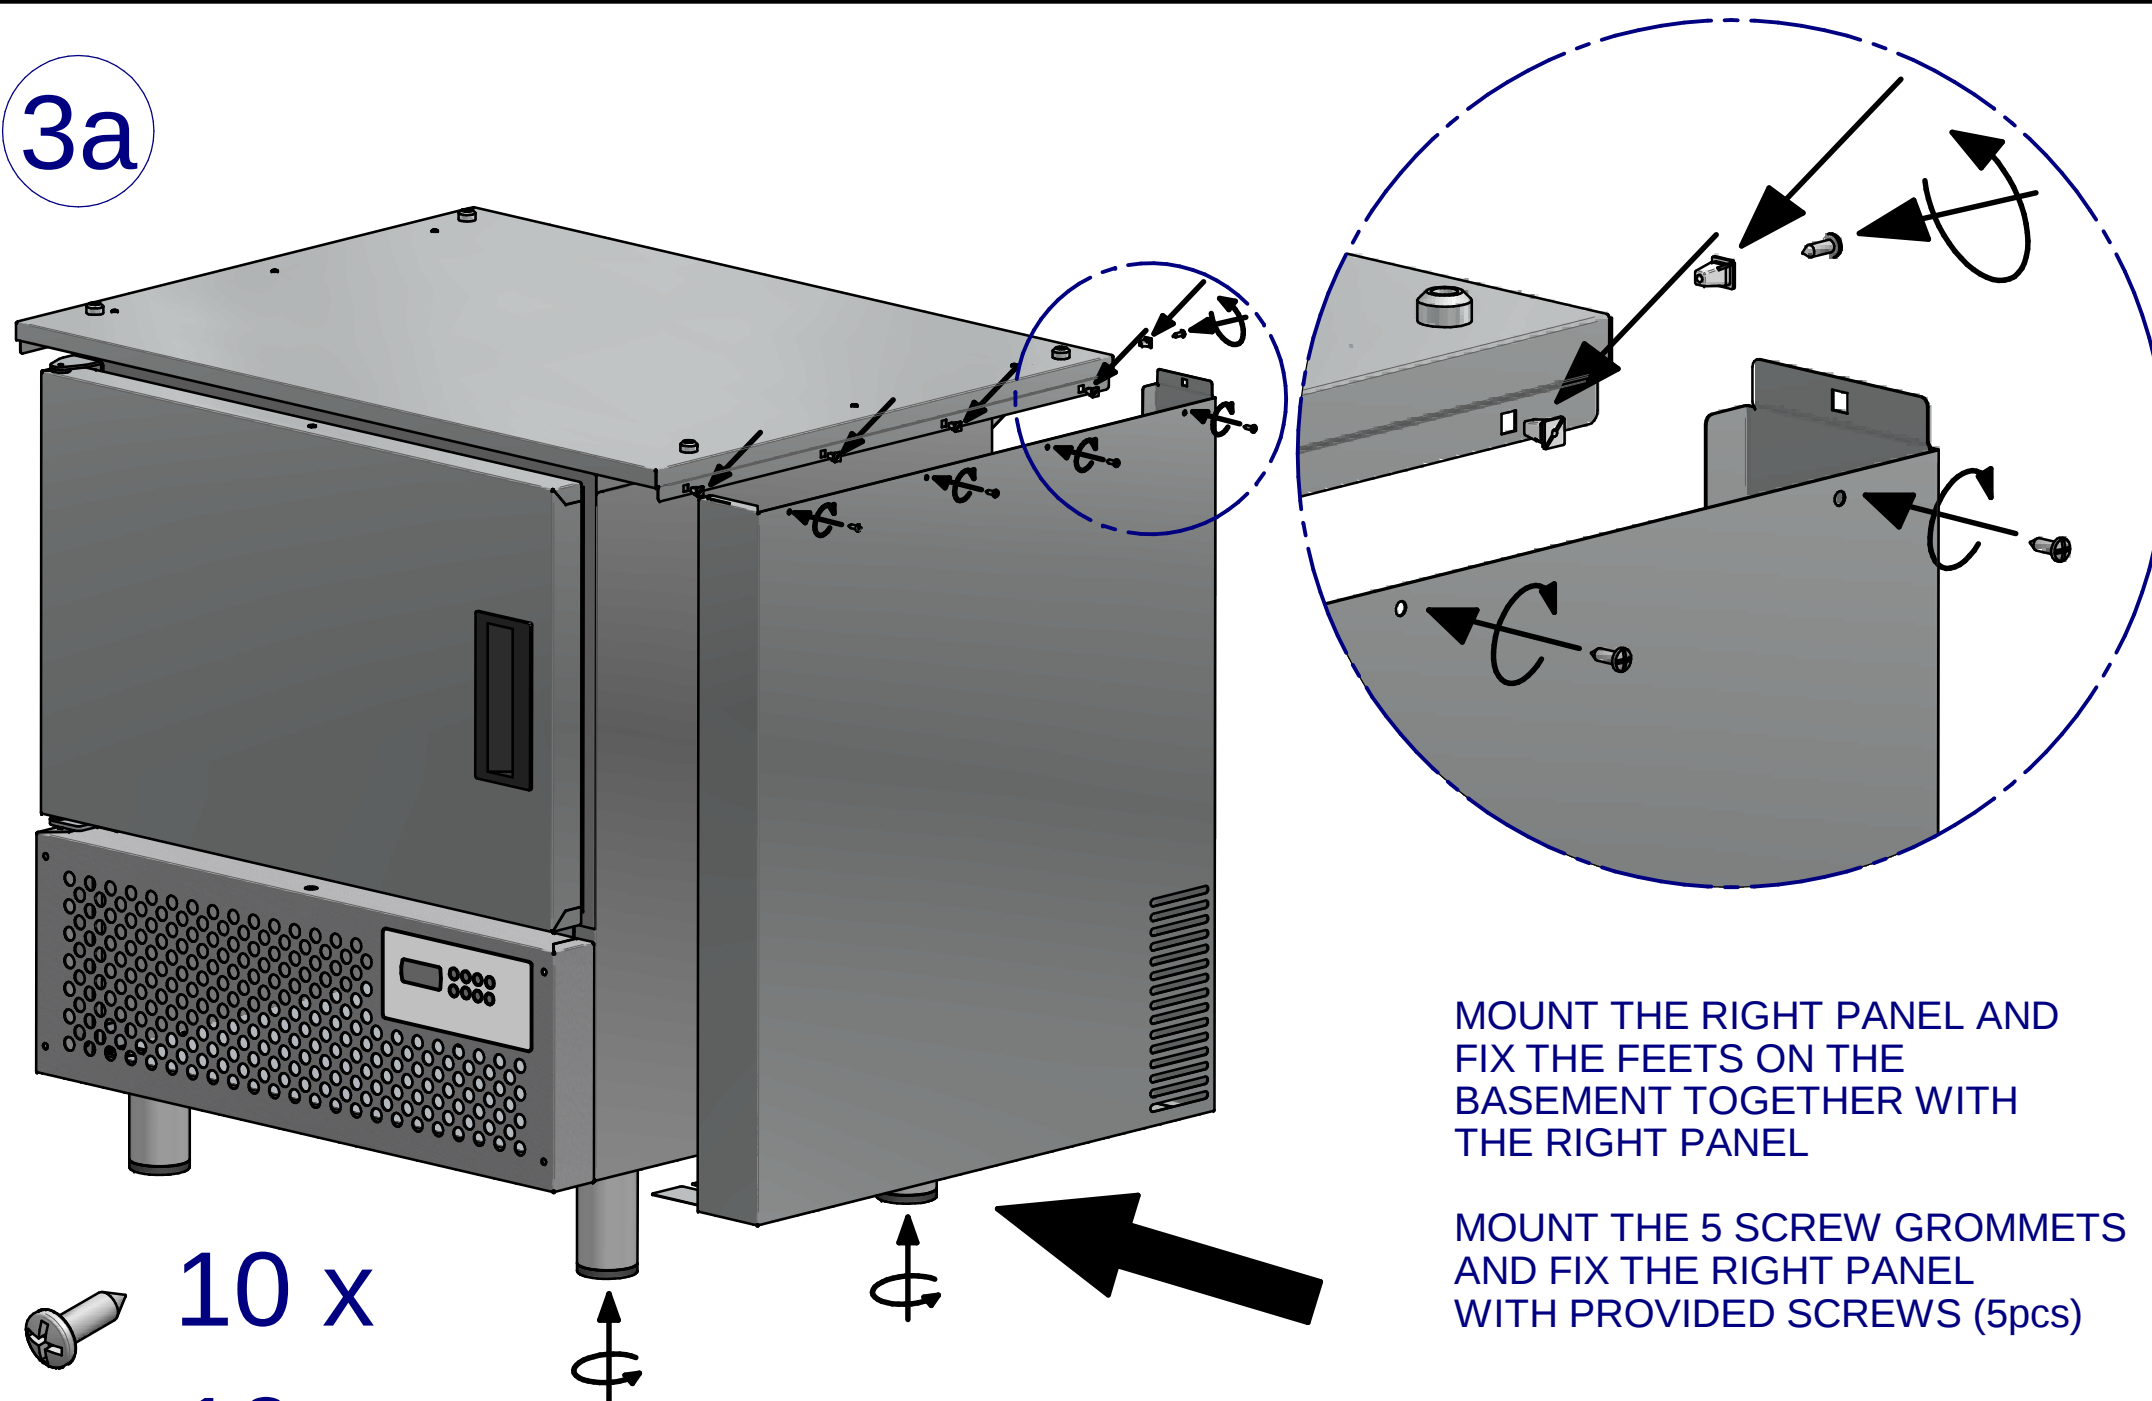

MOUNT THE RIGHT PANEL AND
FIX THE FEETS ON THE
BASEMENT TOGETHER WITH
THE RIGHT PANEL

MOUNT THE 5 SCREW GROMMETS
AND FIX THE RIGHT PANEL
WITH PROVIDED SCREWS (5pcs)

3b



REPEAT 3a FOR
LEFT SIDE

10 x

10 x

Scale :
1:5

A2

Reserved property of VENIX S.r.l. as by law enacted
it is strictly forbidden to copy or transmit to third party the subject of this drawing.

Drawing by:
Parolin D.

Released:
17/09/2019
Page No:
Pag. 1 of 1

Description :
SK43 INSTALLATION INSTRUCTIONS
Filename:
50LIB00224-001

VENIX

VENIX S.r.l.
Via della Fornace, 49
31023 Castelmio di
Resana (Treviso) -
Italia